

### Installation

1. To install the rear wheel, reverse the removal procedure.
2. Install the rear wheel and tighten the rear wheel nuts equally.

**Torque:** 80 lbf·ft (108 N·m, 11 kgf·m).

3. Install the muffler, muffler mount bolt A, B and nut.  
► Before installing the muffler, replace the muffler gasket with a new gasket.
4. Tighten the muffler mount bolt A, muffler mount bolt B and nut.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m).

5. Tighten the muffler band bolt.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m).

6. Check that the wheel rotates freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.