

Electrical Trouble ► Blown Fuse

3. Pull the main fuse and FI fuse out one by one check for a blown fuse.
Always replace a blown fuse with a spare of the same rating.
► Spare fuses are provided in the fuse box.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.