

Setting Mode

1 Backlight brightness adjustment:

You can adjust the brightness to one of three levels.

 
- 1 Turn the ignition switch to ON.
- 2 Press and hold RESET button and SET button until the backlight brightness adjustment.
- 3 Press RESET button. The brightness is switched.
3 is maximum level.
2 is middle level.
1 is minimum level.
- 4 Press SET button. The backlight is set, and then the display moves to the clock setting.

2 To set the clock:


- 1 Press RESET button until the desired hour is displayed.
▶ Press and hold to advance the hour fast.



- 2 Press SET button. The minute digits start flashing.



 - 3 Press RESET button until the desired minute is displayed.
▶ Press and hold to advance the minute fast.



- 4 Press SET button. The clock is set, and then the display moves to the changing the speed and mileage unit.