
## **Switches**

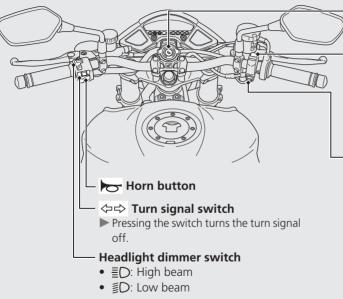

## **Engine stop switch**

Should normally remain in the Run  $\bigcap$  position.

- ▶ In an emergency, switch to the Off 🂢 position to stop the engine.
- Start button

Headlight turns off when operating the starter motor.