

<b>F</b>	
Front Brake Lever Adjustment .....	79
Front Suspension .....	80
<b>Fuel</b>	
Gauge .....	19
Recommended .....	30
Remaining .....	19
Tank Capacity .....	30
Fuses .....	45, 105
<b>G</b>	
Gasohol .....	124
Gasoline .....	30
<b>H</b>	
Headlight Aim .....	85
Headlight Dimmer Switch .....	26
Helmet Holder .....	31, 32
High Beam Indicator .....	25
High Coolant Temperature Indicator .....	24, 88
Honda Contacts .....	128
Horn Button .....	26
<b>I</b>	
Ignition Cut-off System	
Banking Sensor .....	110
Side Stand .....	74
Ignition Key .....	109
Ignition Switch .....	27
Indicators .....	24
Information Record .....	134
Instruments .....	18
<b>L</b>	
Labels .....	7
Load Limits .....	15
Loading Guidelines .....	15
Low Oil Pressure Indicator .....	24, 89
Luggage Tie-Down Hooks .....	33
<b>M</b>	
Maintenance	
Fundamentals .....	40
Importance .....	35
Safety .....	36
Schedule .....	37