


## Adding Coolant

If the coolant level is below the LOWER level mark, add the recommended coolant (► P. 49) until the level reaches the UPPER level mark.

Add fluid only from the reserve tank cap and do not remove the radiator cap.

1. Remove the clips (► P. 58) and inner cover.

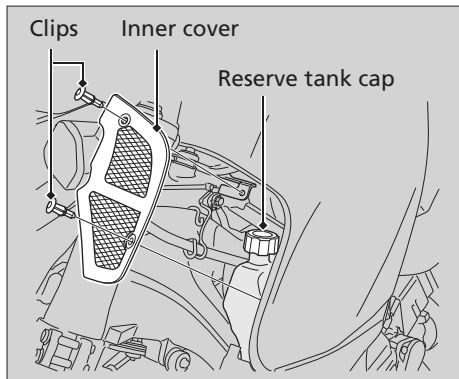

2. Remove the reserve tank cap and add fluid while monitoring the coolant level.
  - Do not overfill above the UPPER level mark.
  - Make sure no foreign objects enter the reserve tank opening.
3. Securely reinstall the cap.