

## Installation

 
Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

Make sure the clock is set to the proper time after the battery is reconnected. ► P. 21  
For proper handling of the battery, see "Maintenance Fundamentals." ► P. 43  
Battery Goes Dead ► P. 97

## Clip

### Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.



### Installation

1. Push the bottom of the center pin.



2. Insert the clip into the hole.
3. Press down on the center pin to lock the clip.