


## Display Check

When the ignition switch is turned on, all the mode and digital segments will show, and the tachometer segment progress to maximum scale and then disappear.

If any part of these displays does not come on when it should, have your dealer check for problems.

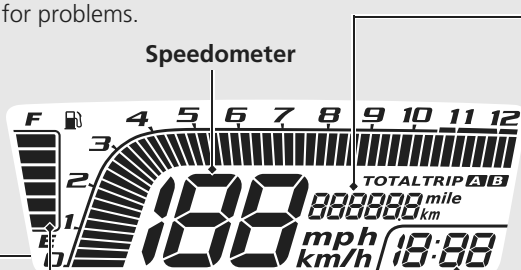

### Odometer [TOTAL] & Tripmeter [TRIP A/B]

**SEL** button switches between odometer & tripmeters.

- Odometer: Total distance ridden.
- Tripmeter: Distance ridden since tripmeter was reset (press and hold the **SET** button to reset to 0.0 mile/km).

### Clock (12-hour display)

### Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 0.61 US gal (2.3 liters)

### If the fuel gauge repeats flashing or turned off:

( P83)

