

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

← Left turn signal indicator

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on with the engine stop switch in the (Run) position.

If it comes on while engine is running:
(P82)

→ Right turn signal indicator

