

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 80	<b>Other Warning Indications</b> .....	P. 83
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 81	Fuel Gauge Failure Indication.....	P. 83
<b>Warning Indicators On or Flashing</b> .....	P. 82	<b>Tire Puncture</b> .....	P. 84
PGM-FI (Programmed Fuel Injection)		<b>Electrical Trouble</b> .....	P. 91
Malfunction Indicator Lamp (MIL).....	P. 82	Battery Goes Dead .....	P. 91
ABS (Anti-lock Brake System) Indicator .....	P. 82	Burned-out Light Bulb .....	P. 91
		Blown Fuse.....	P. 95