


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence 2 P. 26
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - u If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in  (Run) position 2 P. 24
 - Check for a blown fuse 2 P. 95
 - Check for a loose battery connection or battery terminal corrosion 2 P. 40, 49
 - Check the condition of the battery 2 P. 91
- If the problem continues, have your motorcycle inspected by your dealer.