

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” 2 P. 41

### Fuse Box Fuses

1. Remove the front seat. 2 P. 51
2. Open the fuse box cover.
3. Pull the fuses out one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box cover.
5. Reinstall parts in the reverse order of removal.

