


## I Main Fuse

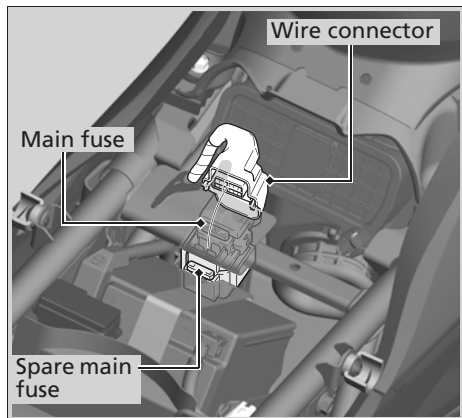

1. Remove the front seat. 2 P. 51
2. Disconnect the wire connector of the starter magnetic switch.

3. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - u Spare main fuse is provided in the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.