

## Instruments *(Continued)*

 
### Display Setting

You can adjust the following settings.


- Clock setting
  - Changing of the speed and mileage unit
- Adjustment will be canceled if the button is not pressed for about 30 seconds, unless each display setting was pre-set individually.

#### 1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SEL** and **SET** buttons until the hour digits start flashing.



 - 3 Press the **SEL** button until the desired hour is displayed.
  - ▶ Press and hold the **SEL** button to advance the hour fast.



- 4 Press the **SET** button. The minute digits start flashing.

