 


5 Press the **[SEL]** button until the desired minute is displayed.

- ▶ Press and hold the **[SEL]** button to advance the minute fast.



6 Press the **[SET]** button. The clock is set, and then the display moves to the changing of the speed and mileage unit.

- ▶ The adjustment can also be set by turning the ignition switch off.

2 Changing of the speed and mileage unit:

- 1 After clock setting, the speed and mileage unit start flashing.
- 2 Press the **[SEL]** button to select either "km/h" and "km" or "mph" and "mile".
- 3 Press the **[SET]** button. The speed and mileage unit is set, and then the display returns to the ordinary display.
 - ▶ The adjustment can also be set by turning the ignition switch off.

