


N Neutral indicator

Comes on when the transmission is in Neutral.

High beam indicator

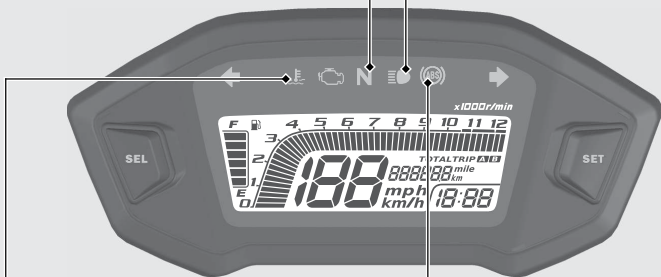

High coolant temperature indicator

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while riding: ➔ P.84

ABS (Anti-lock Brake System) indicator CB300FA only

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ P.85