

## Maintenance Schedule

Items		Frequency *1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line	↗			I		I		I		-
	Throttle Operation	↗			I		I		I		83
	Air Cleaner *2					R			R		69
	Crankcase Breather *3			C	C	C	C	C	C		84
	Spark Plug	✂					R				-
	Valve Clearance	✂					I				-
	Engine Oil		R		R		R		R	1 Year	67
	Engine Oil Filter		R				R				67
	Engine Idle Speed	↗			I		I		I		-
	Radiator Coolant *5				I		I		I	3 Years	70
	Cooling System	↗			I		I		I		-
	Secondary Air Supply System	↗					I				-
	Evaporative Emission Control System *4	↗					I				-

### Maintenance Level

↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

Procedures are provided in an official Honda Service Manual (➡ P. 124).

✂ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

L : Lubricate

R : Replace

C : Clean