
## **Switches**

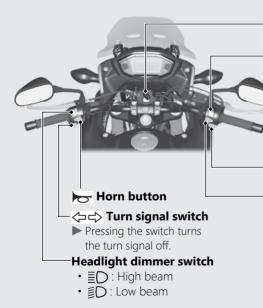

## **Engine stop switch**

Should normally remain in the  $\bigcap$  (Run) position.

▶ In an emergency, switch to the ☆ (Stop) position (the starter motor will not operate) to stop the engine.

## Start button

## - ▲ Hazard switch

Switchable when the ignition switch is in the ON position. Can be turned to off regardless of the ignition switch position.

➤ The signals continue flashing when the ignition switch is in the OFF or LOCK position after the hazard switch is on.