

Engine Oil & Filter

12. Check the condition of the sealing washer on the engine oil drain bolt. Replace the washer every other time the oil is changed.
Install the engine oil drain bolt and tighten it to the specified torque:
22 lbf·ft (30 N·m , 3.0 kgf·m)

Add Engine Oil:

13. Fill the crankcase with the recommended oil (page 116), approximately:
3.2 US qt (3.0 ℓ)
14. Install the oil filler cap.

15. Start the engine and let it idle for 3—5 minutes.
16. Stop the engine and wait 2—3 minutes.
17. Hold the motorcycle upright and check that the oil level is at the upper level mark on the dipstick (page 119).
18. Check that there are no oil leaks.
19. Install the right middle cowl with screw.
20. Install the lower cowl (page 111).

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.