 


## Instruments (Continued)

### To activate/deactivate the automatic reset mode

You can activate or deactivate the automatic reset by refueling mode. Initial setting is deactivated.

- 1 Press and hold **B** button, and turn the ignition switch ON. Keep **B** button pressed until the lower segment of the multi-function display starts to blink.
- 2 Press **A** button to activate or deactivate the automatic reset mode.



- 3 To end the selection, press **B** button. The display will return to the ordinary conditions.

### Indication mode of fuel mileage change

When the odometer or tripmeter A is displayed can be set the unit for current and average fuel mileage.

- 1 This function can be operated after the speedometer is selected in "km/h" and the temperature unit is selected.

➡ P.18

The unit in the multi-function display starts to blink.

- 2 Press **A** button to select "km/l" or "l/100 km".



- 3 To end the selection, press **B** button.