


7. Remove the screw on the right middle fairing and pull it outwards.

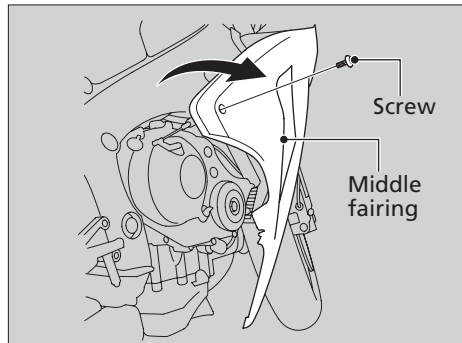

8. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
► Discard the oil and oil filter at an approved recycling center.

