

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 106	<b>Tire Puncture</b> .....	P. 110
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 107	<b>Electrical Trouble</b> .....	P. 118
<b>Warning Indicators On or Flashing</b> .....	P. 108	Battery Goes Dead .....	P. 118
Low Oil Pressure Indicator .....	P. 108	Burned-out Light Bulb .....	P. 118
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 123
Malfunction Indicator Lamp (MIL).....	P. 108		
Combined ABS Indicator .....	P. 109		
HESD (Honda Electronic Steering Damper) Indicator .....	P. 109		