
## **Instruments** (Continued)

## To reset the tripmeter and tripmeter A fuel consumption

To reset tripmeter A and tripmeter A fuel consumption together, press and hold the MODE button with the tripmeter A or tripmeter A fuel consumption displayed.

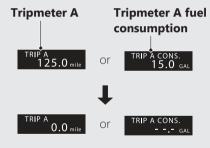

To reset the tripmeter B, press and hold the MODE button with the tripmeter B displayed.

