

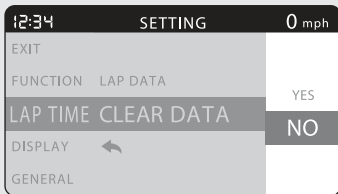


CLEAR DATA

- 1 Select "NO" (not clear) or "YES" (clear) using the **SEL**  (up) or **SEL**  (down) button.
- 2 Press the **MODE** button. The display returns to the upper level hierarchy.



To use the Lap Timer  P.86