


- 3 Select the "NO" (not restore) or "YES" (restore) using the the **SEL** **▲** (up) or **SEL** **▼** (down) button on the confirmation screen.

- 4 **When the "NO" is selected**
Press the **MODE** button. The set value is maintained, and then the display returns to the "RESTORE DEFAULT" menu on the "GENERAL" menu screen.

When the "YES" is selected

Press the **MODE** button. The set value return to default setting.

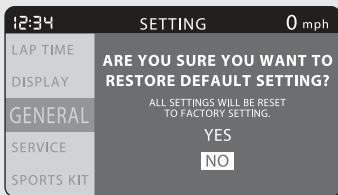

- 5 Select the "EXIT" by pressing the **MODE** button.



- 6 The display returns to the "RESTORE DEFAULT" menu on the "GENERAL" menu screen.