



## Indicators (Continued)




 **High beam indicator**

 **Low fuel indicator**

- Comes on briefly when the ignition switch is turned to the ON position.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 1.1 US gal (4.0 L)

**If it comes on:**  **P.38**

 **High coolant temperature indicator**

Comes on briefly when the ignition switch is turned to the ON position.

**If it comes on while riding:**  **P.180**

 **ABS (Anti-lock Brake System) indicator**

**CBR1000RA/S1/S2**

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:**  **P.182**

 **Neutral indicator**

Comes on when the transmission is in Neutral.