



Maintenance Schedule

Items	Frequency*1								Regular Replace	Refer to page
	× 1,000 mi	0.6	4	8	12	16	20	24		
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line				I		I		I		–
Throttle Operation				I		I		I		161
Air Cleaner *2					I			I		–
Spark Plug	Every 16,000 mi (25,600 km):			I	Every 32,000 mi (51,200 km):			R		–
Valve Clearance						I				–
Engine Oil		R		R		R		R	1 Year	145
Engine Oil Filter		R				R				145
Engine Idle Speed				I		I		I		–
Radiator Coolant *4				I		I		I	3 Years	147
Cooling System				I		I		I		–
Secondary Air Supply System						I				–
Evaporative Emission Control System *3						I				–
Exhaust Gas Control Actuator Cable						I				–

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 217).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate