

Tires

- Air Pressure 133
- Puncture..... 184
- Replacing..... 133, 184

Torque Control Indicator 93

Torque Control OFF Indicator..... 93

Transporting Your Motorcycle..... 208

Tripmeter..... 29, 201

Troubleshooting 178

Turn Signal Switch..... 98

U

Units..... 71

User Letter..... 41, 64

V

Vehicle Identification Number 210

W

Warranty Coverage and Service 218

Washing Your Motorcycle..... 203

Weight Limit 17

Wheels

- Front Removal 185

Rear Removal..... 190