


To switch the multi-information display

 
To select the display area, repeatedly press the **MODE** button.

- ▶ Can not select the INFO 3 display while pop-up information displayed. **➡ P.90**

If the **MODE** button is not pressed within 10 seconds, the display returns to the riding mode display.

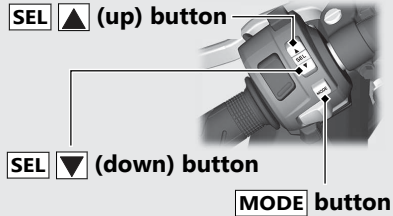

Riding mode **➡ P.101**



INFO 1 display **➡ P.28**



INFO 3 display **➡ P.39**



INFO 2 display **➡ P.31**

Press the **MODE** button