



Maintenance Schedule

Items	Frequency*1								Regular Replace	Refer to page
	× 1,000 mi	0.6	4	8	12	16	20	24		
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line				I		I		I		-
Throttle Operation				I		I		I		162
Air Cleaner *2					I			I		-
Spark Plug	Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									-
Valve Clearance						I				-
Engine Oil		R		R		R		R	1 Year	146
Engine Oil Filter		R				R				146
Engine Idle Speed				I		I		I		-
Radiator Coolant *4				I		I		I	3 Years	148
Cooling System				I		I		I		-
Secondary Air Supply System						I				-
Evaporative Emission Control System *3						I				-
Exhaust Gas Control Actuator Cable						I				-

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 218).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

R : Replace

L : Lubricate