

Fuses..... 130, 198

G

Gasohol 217

Gasoline 111

Gear Position Indicator 23

General

Date & Time 70

Restore Default..... 76

Units 71

H

Hazard Switch..... 98

Headlight Aim 163

Headlight Dimmer Switch 98

Helmet Holder..... 112

HESD (Honda Electronic Steering

Damper) 95, 183

High Beam Indicator..... 94

High Coolant Temperature

Indicator 94, 181

Honda Contacts 221

Horn Button 98

I

Ignition Cut-off System

Banking Sensor..... 203

Side Stand 153

Ignition Key..... 201

Ignition Switch 99, 108, 202

Indicator

ABS (Anti-lock Brake System) 94, 183

Gear Position..... 23

HESD (Honda Electronic Steering

Damper)..... 95, 183

High Beam..... 94

High Coolant Temperature 94, 181

Left Turn Signal 93

Low Fuel 94

Low Oil Pressure 93, 182

Neutral..... 94

PGM-FI (Programmed Fuel Injection)

Malfunction 95, 182

Right Turn Signal..... 93

Shift..... 61, 93, 96

Torque Control..... 93, 184

Torque Control OFF 93

Warning 182