

Middle Fairing

The middle fairing must be removed to remove the right under fairing and to service the spark plug.

The right and left middle fairing removal can be done in the same way.

Removal

1. Remove the clips.
2. Remove the bolts A, bolts B and bolt C.

