

Troubleshooting

Engine Will Not Start	P. 85	Burned-out Light Bulb.....	P. 96
Overheating (Segment H flashes in coolant temperature gauge)	P. 86	Blown Fuse.....	P. 100
Warning Indicators On or Flashing	P. 87		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 87		
ABS (Anti-lock Brake System) Indicator	P. 87		
Other Warning Indications	P. 88		
Fuel Gauge Failure Indication.....	P. 88		
Coolant Temperature Gauge Failure			
Indication.....	P. 88		
Tire Puncture	P. 89		
Electrical Trouble	P. 96		
Battery Goes Dead	P. 96		