











Items		Frequency*1								Refer to page
		x 1,000 mi	0.6	4	8	12	16	20	24	
		x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
Emission-related Items	Fuel Line 				I		I		I	-
	Throttle Operation 				I		I		I	81
	Air Cleaner*2					R			R	68
	Crankcase Breather*3			C	C	C	C	C	C	82
	Spark Plug 						R			-
	Valve Clearance 						I			-
	Engine Oil	Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								64
	Engine Oil Filter		R		R		R		R	66
	Engine Idle Speed 		I		I		I		I	-
	Radiator Coolant*5				I		I		R	69
	Cooling System 				I		I		I	-
	Secondary Air Supply System 				I		I		I	-
Evaporative Emission Control System*4 					I			I	-	

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 122).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace