


# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

## **Low oil pressure indicator**

Comes on when the ignition switch is turned to the ON position.


Goes off when the engine starts.


**If it comes on while engine is running:**  **P.92**

## **ABS (Anti-lock Brake System) indicator**

**CBR500RA only**


Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:**  **P.93**

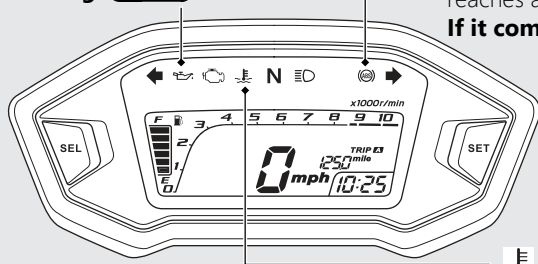

## **High coolant temperature indicator**

Comes on briefly when the ignition switch is turned to the ON position.

**If it comes on while riding:**  **P.91**