

# Maintenance Schedule

Items		Frequency	Odometer Reading*1							Refer to page	
			x 1,000 mi	0.6	4	8	12	16	20		24
			x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	71
	Air Cleaner*2						I			I	-
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R							-	
	Valve Clearance							I			-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							57	
	Engine Oil Filter			R		R		R		R	57
	Engine Idle Speed			I		I		I		I	-
	Radiator Coolant*3					I		I		R	59
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
	Evaporative Emission Control System*4						I			I	-
	Exhaust Gas Control Actuator Cable			Every 16,000 mi (25,600 km): I							-

## Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 115).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)  
R : Replace L : Lubricate