

The right lower fairing must be removed to service the coolant reserve tank and to replace the engine oil or oil filter.

■ Removal

1. Remove the bolts A, bolt B, bolt C, bolt D, collar and clips. ➤ [P. 53](#)
2. Remove the right lower fairing.

■ Installation

Install the parts in the reverse order of removal.