


Electrical Trouble ► Blown Fuse

3. Pull the fuses out one by one with the fuse puller in the tool kit to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.

Main Fuse

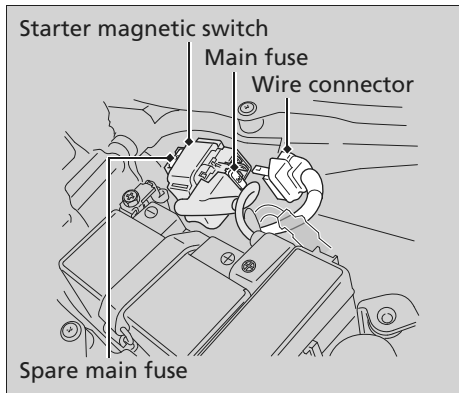

1. Remove the front seat. [► P. 49](#)
2. Disconnect the wire connector of the starter magnetic switch.