

Items		Frequency *1								Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line	🔧			I		I		I	-	
	Throttle Operation	🔧			I		I		I	74	
	Air Cleaner *2	🔧				I			I	-	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								-
	Valve Clearance	🔧					I			-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								59
	Engine Oil Filter		R		R		R		R	59	
	Engine Idle Speed	🔧	I		I		I		I	-	
	Radiator Coolant *4				I		I		R	61	
	Cooling System	🔧			I		I		I	-	
	Secondary Air Supply System	🔧			I		I		I	-	
	Evaporative Emission Control System *3	🔧					I		I	-	
Exhaust Gas Control Actuator Cable	🔧	Every 16,000 mi (25,600 km): I								-	

**Maintenance Level**

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 120).
- 🔧 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

**Maintenance Legend**

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- L : Lubricate