

Indicators *(Continued)*

REV Indicator

- Comes on briefly when the ignition switch is turned to the ON position.

Initial setting

REV indicator blinking fastest RPM: 12,500 r/min (rpm)

REV indicator blinking interval RPM: 250 r/min (rpm)

| REV indicator | r/min (rpm) |
|------------------|--------------------|
| Blinking | 12,000 r/min (rpm) |
| Blinking fast | 12,250 r/min (rpm) |
| Blinking fastest | 12,500 r/min (rpm) |

To set the shift up rev setting: ➡ P.36

To set the shift width setting: ➡ P.38