

Troubleshooting

| | |
|---|--------|
| Engine Will Not Start | P. 105 |
| Overheating (Segment H flashes in coolant temperature gauge) | P. 106 |
| Warning Indicators On or Flashing | P. 107 |
| Low Oil Pressure Indicator | P. 107 |
| PGM-FI (Programmed Fuel Injection) | |
| Malfunction Indicator Lamp (MIL)..... | P. 107 |
| ABS (Anti-lock Brake System) Indicator | P. 108 |
| Torque Control Indicator..... | P. 109 |
| Other Warning Indications | P. 110 |
| Fuel Gauge Failure Indication..... | P. 110 |
| Coolant Temperature Gauge Failure | |
| Indication | P. 111 |
| Tire Puncture | P. 112 |

| | |
|---------------------------------|--------|
| Electrical Trouble | P. 120 |
| Battery Goes Dead..... | P. 120 |
| Burned-out Light Bulb | P. 120 |
| Blown Fuse..... | P. 123 |