

## Tire Puncture ► Removing Wheels

5. Remove the rear axle shaft, chain adjusting plates, brake caliper bracket, rear wheel and side collars.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc to pad surfaces.
  - Do not push the brake pedal while the wheel is removed.

### Installation

1. Attach the right and left side collars in their original locations on the rear wheel.
2. To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

#### NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

3. Make sure that the lug on the swingarm is positioned in the slot on the brake caliper bracket.

