

8. Install the oil filter spring into the oil filter cover, and then install the new gasket and oil filter cover by tightening the oil filter cover bolts.

Torque: 9 lbf·ft (12 N·m, 1.2 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf·ft (24 N·m, 2.4 kgf·m)

10. Fill the crankcase with the recommended oil (2 P. 54, 2 P. 135) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

1.6 US qt (1.5 L)

When changing oil only:

1.5 US qt (1.4 L)

11. Check the oil level. 2 P. 70
12. Check that there are no oil leaks.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

