

Troubleshooting

Engine Will Not Start	P. 94
Overheating (High coolant temperature indicator is on)	P. 95
Warning Indicators On or Flashing	P. 96
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 96
ABS (Anti-lock Brake System) Indicator	P. 96
Other Warning Indications	P. 97
Fuel Gauge Failure Indication.....	P. 97
Tire Puncture	P. 98
Electrical Trouble	P. 105
Battery Goes Dead.....	P. 105
Burned-out Light Bulb	P. 105
Blown Fuse.....	P. 108

Unstable Engine Operation Occurs Intermittently	P. 111
--	--------