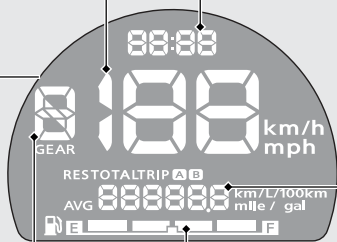


Speedometer**Clock (12-hour or 24-hour display)**To set the clock: **P.30**
**Odometer [TOTAL] & Tripmeter [TRIP A/B]
 & Average fuel mileage [AVG A/B] &
 Current fuel mileage & Reserve fuel
 consumption [RES]** **P.24**
Gear position indicator

The gear position is shown in the gear position indicator.

- ▶ “-” appears when the transmission is not shifted properly.

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.58 US gal (2.2 L)


**If the fuel gauge indicator flashes in a
 repeat pattern or turns off:** **P.103**