

## Battery

### Removal

Make sure the ignition switch is in the OFF position.

1. Remove the seat. ➤ P. 71
2. Remove the data link connector while pressing its tab from the battery cover.
3. **CMX300A only**  
Remove the air check connector while pressing its tab from the battery cover.
4. Remove the connector holder and relay holders from the battery cover.
5. Release the wire harness from the guide on the battery cover.

