


Switches *(Continued)*

Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

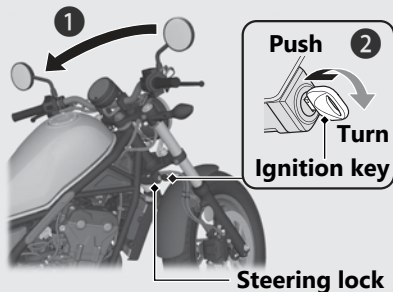

Locking

- 1 Turn the handlebar all the way to the left.
- 2 Insert the ignition key in the steering lock.
- 3 Push the ignition key down, and turn it 180 degrees clockwise.
 - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 4 Remove the ignition key.

Unlocking

Insert the ignition key, push it in, and turn it 180 degrees counterclockwise.