


Starting the Engine *(Continued)*

If you cannot start the engine:

With the throttle slightly open (about 1/8 in (3 mm), without freeplay) while starting the engine.

About 1/8 in (3 mm), without freeplay

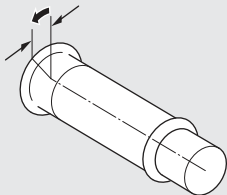

If the engine does not start:

- a Open the throttle fully and press the start button for 5 seconds.
- b Repeat the normal starting procedure.
- c If the engine starts, open the throttle slightly if idling is unstable.
- d If the engine does not start, wait 10 seconds before trying steps **a** & **b** again.

If Engine Will Not Start ➔ P.95