

Maintenance Fundamentals

Check the following items at regular intervals:

- Oil level is between the upper and lower level marks. **2** P. 71
- Brake fluid level is
Front: above the LOWER level mark. **2** P. 79
Rear: between the UPPER and LOWER level marks. **2** P. 79
- Engine coolant level is between the UPPER and LOWER level marks. **2** P. 77
- Side stand functions properly. **2** P. 82