

Ignition switch

Switches the electrical system on/off, locks the steering.

► Key can be removed when in the

○ (Off) or 🔒 (Lock) position.

I (On)

Turns electrical system on for starting/riding.

○ (Off)

Turns engine off.

🔒 (Lock)

Locks steering.

